


Set-top Box - Create and Update a Favorites List


If you like to be able to surf within only a specific set of channels, you can create Favorites lists.

By default, your set top box has grouped channels into several pre-set Favorites lists including: All Channels, Subscribed Channels, Movie Channels, Sports Channels, Music Channels, Entertainment Channels, Kids Channels, News Channels, Business News Channels, Infotainment Channels, Religious Channels, and Regional Channels. You may create up to five additional Favorites lists.

1. Press the *MENU* button to access the Main Menu. Highlight Settings. Use the arrow buttons to highlight Edit Favorites, and then press the *OK* button.

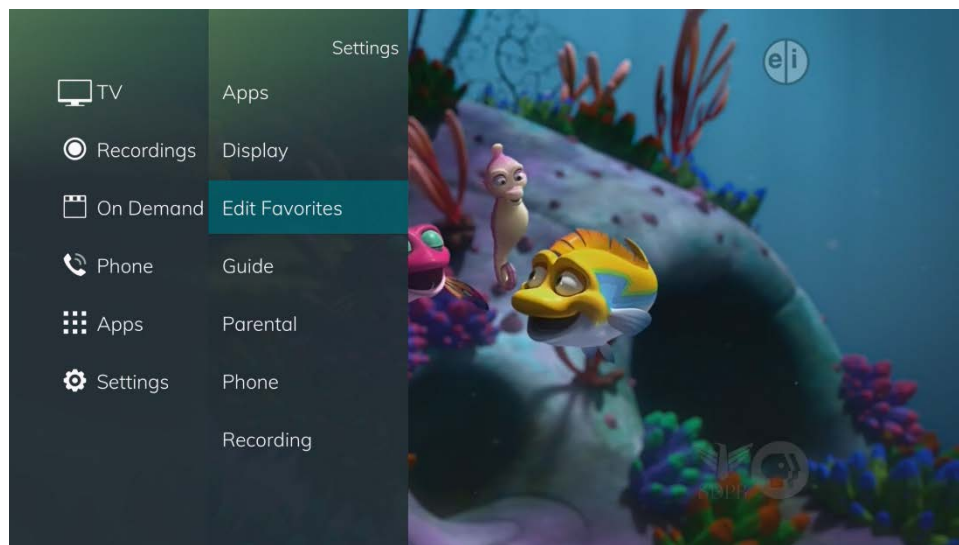

2. If you are not already in a 'New List' by default, arrow right to access a New List.
3. All available channels will display. Use the *Up/Down arrow* buttons on the remote control to move through the list of channels. When you are on a channel you want to add to your list, press the *OK* button to mark it as part of this Favorites list.
4. To name the list, press the *Yellow* button on the remote control.
5. Use the arrow buttons to move through the letters on the screen. Press the *OK* button on the remote control to choose a letter. When you have named your list, arrow down to select the Submit to accept your name.

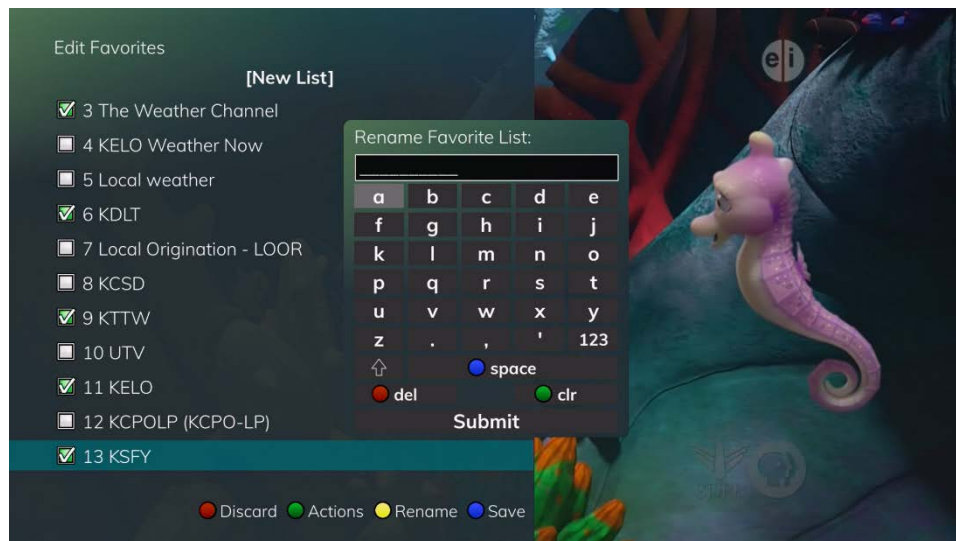

6. To Save your favorites list, press the *Blue* button on the remote control and then press the *OK* button.
7. To Discard a favorites list, press the *Red* button on the remote control.
8. Press the *EXIT* button on the remote control to leave the menu.